

The More Power Puller®

Mfg. by The Wyeth-Scott Co. • Newark, Ohio • Phone: 800/743-4521 or 740/345-4528 • Email: sales@wyeth-scott.com

Instructions to Remove Pawl (P14)

Parts Needed:

- Part P9 (Rivet for Pawl) - holds P14 (Pawl) in frame &/or yoke
- **Optional:** If replacing P14 Pawl &/or P11 Spring
 - P14 Pawl
 - P11 Spring

Tools Needed To Remove P14 Pawl / P9 Rivet:

- Safety glasses, etc. and common sense...
- Electric Hand Grinder
- Hammer
- Drive Pin (Punch) - Approximately 3/8" in diameter x 8" long
- Blocking to elevate puller

Removal:

- Read all directions before beginning.
- Place the puller on it's side on a solid flat surface (workbench, etc.) with the small peened end of P9 rivet facing up.
- Use an electric hand grinder to grind the small peened end off the P9 so it is flush with the frame &/or yoke.
- Elevate the puller approximately 6 inches from the workbench with one side facing up - at an angle. (Need room for the P9 to exit the puller)
- Place a drive pin (punch) over the P9 and drive the P9 out of the puller by hitting the drive pin (punch) with a hammer.
- Remove the P14 Pawl from the puller.
- If removing the P11 Spring from the P14 Pawl, twist the spring over the pawl's tooth/prong.